



KEBA

STOTELĖS PRIJUNGIMO INSTRUKTAŽAS

Susikūrus stotelę mūsų programėlėje, gautus duomenis reikės susivesti savo stotelės programėlėje. Visų pirma reikės per programėlę arba Keba portalą pašalinti/atjungti jūsų stotelę ir ją perkrauti, kitaip nematysite visų OCPP nustatymų.

Parameter	Setting	Description
Chargepoint Identity		String used for identification at the OCPP backend.
OCPP Communication Type	OCPP 1.6 JSON	Connection type which is used for the communication between charging station and OCPP backend.
Central System Address	ocpp.circlelink.app	Hostname of the OCPP backend.
Central System Port	443	Port of the OCPP backend.
Central System Path		Path of the OCPP backend.
Secure Central System Connection	✓ ON	Enables or disables the encrypted communication with the OCPP backend.
Central System Authentication Method	None	Authentication method of the OCPP backend.
Reconnect Interval	30	Time interval (in seconds) in which a WebSocket connection is retried.
WebSocket Ping Interval	240	Time interval (in seconds) between WebSocket Pings initiated by the charging station. Enter "0" to disable the WebSocket Ping / Pong. In this case there is either no Ping / Pong or the server initiates the Ping and the charging station responds with Pong.
Predefined Token		This string/token is required, when the authorization in the web interface is disabled. A charging process can only be started if the predefined token is recognized by the OCPP backend.
Meter values during charging session	15	Time interval (in seconds) in which the meter values are transmitted to the OCPP backend during a charging session. Enter "0" to disable the transmission.
Meter values referenced to clock	900	Time interval (in seconds) in which the meter values are transmitted to the OCPP backend, independently from a running charging session. Time reference is always 00:00:00 (midnight).

✓ Apply

Keba portale suveskite šiuos duomenis:

OCPP Communication Type – OCPP 1.6 JSON


Central System Address – Iš mūsų programėlės gautas URL

Chargepoint Identity – Iš mūsų programėlės gautas ChargerID

Predefined Token – Reikia sužinoti iš mūsų programėlės:



Atsidarę CircleLink programėlę nueikite į savo stotelės nustatymus:

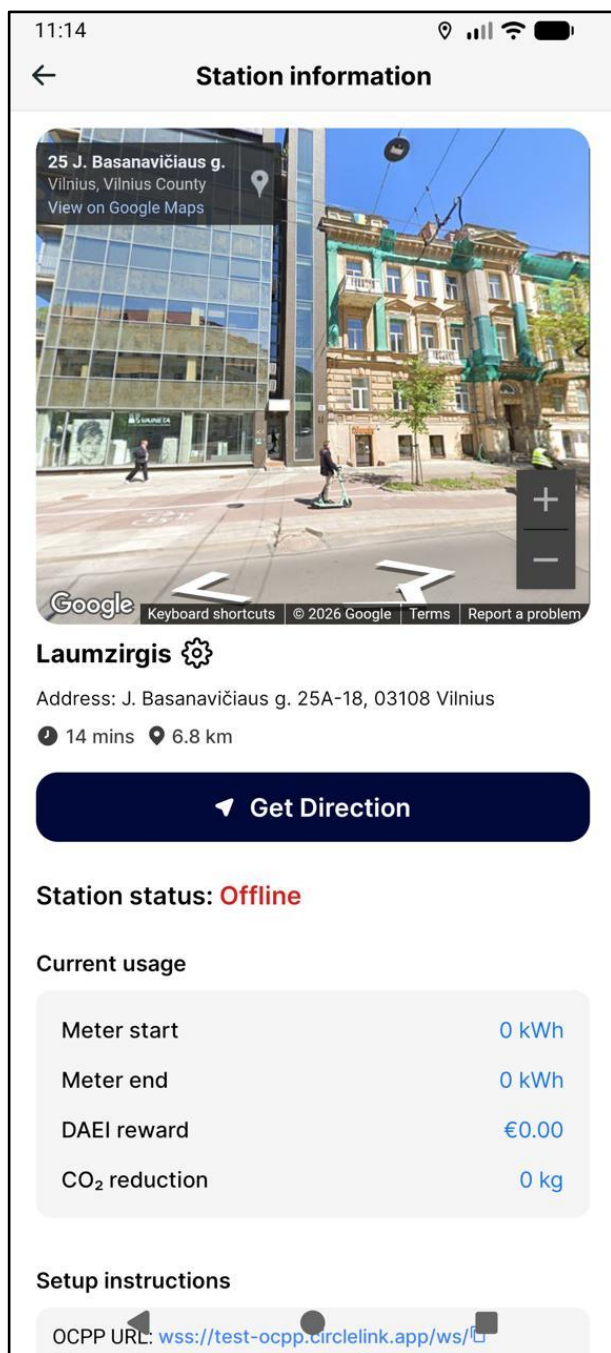

Paspauskite **krumpliaračį**



11:14

← Station configuration ✓

General information

Station Name

Laumzīgis

Station Id

U0000002SBZH17SQ

⚠ Changing Station ID breaks the OCPP connection. Change with care.

ID tags (Authorization tokens)

ID tag 1

ba71bb22ed274f8da7c4

ID tag 2

ID tag 3

ID tag 4

ID tag 5

Savo programēlējē **Predefined token** pakeiskite ī tokī, koks yra nurodytas mūsų programēlējē kaip ID tag 1